


TRUCK ROCKER PANELS

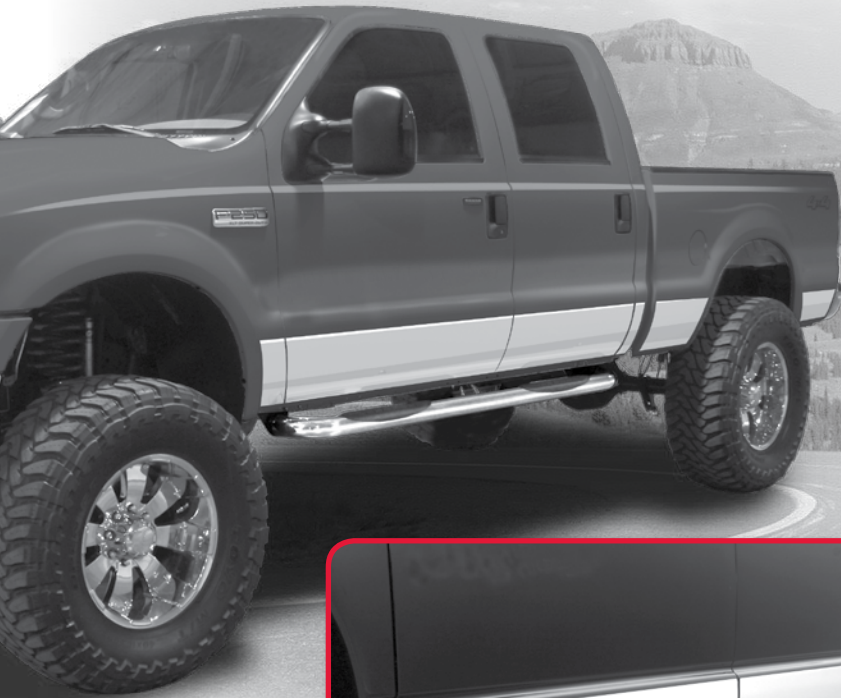

- Bright stainless steel mirror finish
- Mounts with high performance 3M™ adhesive
- Easy installation
- No drill applications
- 3 year/36,000 mile warranty



Enhance Adhesion of
3M™ Tapes with
Adhesion Promoter
06396



See Page 65 for ICI Truck Rocker Panel Applications

CUSTOMIZE YOUR LOOK

INSTALLS IN 6 EASY STEPS!



A do-it-yourself automotive trim accessory made from a flexible chrome laminate.

- Premium grade stainless steel
- Easy installation with 3M™ Adhesive

ROCKER PANELS 5 Piece Kits

5" x 54"	UCUT-RKP5
6" x 54"	UCUT-RKP6
7" x 54"	UCUT-RKP7
8" x 54"	UCUT-RKP8

PILLAR POSTS 5 Piece Kits

5" x 24" UCUT-PP



ROCKER PANELS



CHEVY

		Width	Pcs.	Fit	Comments	P/N
07-12	Silverado 5 ft. 8 in. Bed Crew Cab w/o Flares, w/o BSM	5.5	8	A	Front door 46 3/4"	T2216-304M
07-12	Silverado 5 ft. 8 in. Bed Crew Cab w/o Flares, w/ BSM	5.5	8	A	Front door 43 1/4", front door cut to match BSM	T2214-304M
07-12	Silverado 5 ft. 8 in. Bed Crew Cab	7.5	8	A		T2240-304M
07-12	Silverado 5 ft. 8 in. Bed Ext. Cab	7.5	10	A		T2241-304M
07-12	Silverado 6 ft. 6 in. Bed Crew Cab w/o Flares	5.5	10	A		T2220-304M
07-12	Silverado 6 ft. 6 in. Bed Crew Cab	7.5	10	A		T2237-304M
07-12	Silverado 6 ft. 6 in. Bed Ext. Cab	5.5	10	A		T2218-304M
07-12	Silverado 6 ft. 6 in. Bed Ext. Cab	7.5	10	A		T2238-304M
07-12	Silverado 6 ft. 6 in. Bed Reg. Cab w/o Flares	5.5	10	A		T2223-304M
07-12	Silverado 8 ft. Bed Crew Cab	5.5	10	A		T2221-304M
07-12	Silverado 8 ft. Bed Ext. Cab	5.5	10	A		T2222-304M
07-12	Silverado 8 ft. Bed Reg. Cab w/o Flares	5.5	10	A		T2224-304M
03-06	Silverado 6 ft. 6 in. Bed Crew Cab w/ Flares	6	10	SP	Aprx. 2 1/2" from door bottom	T2168-304M
01-02	Silverado 6 ft. 6 in. Bed Crew Cab	5.5	10	A		T2137-304M
00-06	Silverado 6 ft. 6 in. Bed Ext. Cab	5.5	12	SP	Aprx. 3" from door bottom	T2161-304M
00-06	Silverado 6 ft. 6 in. Bed Ext. Cab w/ Flares	5.5	10	SP	Aprx. 3" from door bottom	T2162-304M
99-00	Silverado 6 ft. 6 in. Bed Ext. Cab	5.5	11	A		T2066-304M
96-98	Silverado 6 ft. 6 in. Bed Ext. Cab	5.5	11	A		T2031-304M
03-06	Avalanche w/BSM w/o Flares w/o Cladding	5.5	10	A		T2112-304M
00-06	Tahoe	5.5	10	A		T2122-304M

GMC

07-12	Sierra 5 ft. 8 in. Bed Crew Cab w/o Flares, w/ BSM	5.5	8	A	Front door 43 1/4"	T2215-304M
07-12	Sierra 5 ft. 8 in. Bed Crew Cab w/o Flares	5.5	8	A	Front door 46 3/4"	T2217-304M
07-12	Sierra 6 ft. 6 in. Bed Crew Cab w/o Flares	5.5	8	A		T2226-304M
07-12	Sierra 6 ft. 6 in. Bed Ext. Cab	5.5	8	A		T2219-304M
07-12	Sierra 8 ft. Bed Reg. Cab w/o Flares	5.5	8	A		T2230-304M
04-06	Sierra 5 ft. 8 in. Bed Crew Cab w/o Flares	5.5	12	SP	Aprx. 3" from door bottom	T2193-304M
04-06	Sierra 5 ft. 8 in. Bed Crew Cab w/ Flares	6	10	SP	Aprx. 2 1/2" from door bottom	T2196-304M
01-06	Sierra 6 ft. 6 in. Bed Crew Cab w/ Flares	5.5	10	SP	Aprx. 3" from door bottom	T2164-304M
01-06	Sierra 6 ft. 6 in. Crew Cab w/o Flares	5.5	12	SP	Aprx. 3" from door bottom	T2163-304M
00-06	Sierra 6 ft. 6 in. Ext. Cab w/o Flares	6	12	SP	Aprx. 2 1/2" from door bottom	T2165-304M
99-06	Sierra 8 ft. Bed Reg. Cab w/o Flares	5.5	10	A	Fits 1" below body side molding	T2070-304M
99-06	Sierra 8 ft. Bed Std Cab w/ Flares	6	8	SP	Aprx. 2 1/2" from door bottom	T2185-304M
07-12	Yukon BSM (Cut Back to Match BSM)	5.5	4	A		T2209-304M
07-12	Yukon XL w/ BSM	5.5	4	A		T2212-304M
07-12	Yukon XL	6	8	B		T2211-304M
95-99	Yukon	5.5	10	A		T2020-304M

DODGE/RAM

09-12	Ram 5 ft. 7 in. Bed Crew Cab	5.75	12	SP		T3029-304M
09-12	Ram 6 ft. 6 in. Bed Quad Cab (09 1500 Only)	5.75	12	SP		T3028-304M
10-12	Ram 2500 Mega Cab	5.75	12	A		T3041-304M
06-09	Ram 6 ft. Bed Mega Cab (09 2500 Only) w/o BSM	8	12	SP	Body line down	T3024-304M
03-09	Ram 6 ft. Bed Quad (09 2500 Only) w/ BSM	5.5	12	A		T3005-304M
03-09	Ram 6 ft. Bed Quad (09 2500 Only) w/o BSM	8	12	SP		T3006-304M
03-09	Ram 8 ft. Bed Quad (09 2500 Only) w/o BSM	8	12	SP		T3008-304M
03-09	Ram 8 ft. Bed Reg. Cab (09 2500 Only) w/o BSM	8	10	SP		T3007-304M

FORD

09-12	F-150 5 ft. 6 in. Bed Crew Cab w/o Flares	6.5	12	SP	Fits body crease down	T4130-304M
09-12	F-150 5 ft. 6 in. Bed Crew Cab w/ Flares	6.5	12	SP	Fits body crease down	T4131-304M
09-12	F-150 6 ft. 6 in. Bed Crew Cab w/o Flares	6.5	12	SP	Fits body crease down	T4132-304M
09-12	F-150 6 ft. 6 in. Bed Crew Cab w/ Flares	6.5	12	SP		T4133-304M
04-12	F-150 5 ft. 6 in. Bed Ext. Cab w/o BSM	6.5	10	SP	Fits body crease down	T4113-304M
04-12	F-150 5 ft. 6 in. Bed Ext. Cab w/ Flare, w/o BSM	6.5	10	SP	Fits body crease down	T4114-304M
04-12	F-150 6 ft. 6 in. Bed Ext. Cab w/o BSM	6.5	10	SP	Fits body crease down	T4105-304M
04-12	F-150 6 ft. 6 in. Bed Ext. Cab w/ Flare, w/o BSM	6.5	10	SP	Fits body crease down	T4106-304M
04-08	F-150 5 ft. 6 in. Bed Crew Cab w/o Flares, w/o BSM	6.5	12	SP	Fits body crease down	T4107-304M
04-08	F-150 5 ft. 6 in. Bed Crew Cab w/ Flares, w/o BSM	6.5	12	SP	Fits body crease down	T4108-304M
04-08	F-150 6 ft. 6 in. Bed Crew Cab w/o Flares, w/o BSM	6.5	12	SP	Fits body crease down	T4123-304M
11-12	F-250/F-350 Super Duty 8 ft. Bed Crew Cab Dually	9.25	12	B		T4141-304M
11-12	F-250/F-350 Super Duty 8 ft. Bed Ext. Cab Dually	9.25	12	B		T4142-304M
11-12	F-250/F-350 Super Duty 8 ft. Bed Crew Cab	9.25	12	B		T4143-304M
11-12	F-250/F-350 Super Duty 8 ft. Bed Ext. Cab	9.25	12	B		T4144-304M
11-12	F-250/F-350 Super Duty 6 ft. 6 in. Bed Crew Cab	9.25	12	B		T4145-304M
11-12	F-250/F-350 Super Duty 6 ft. 6 in. Bed Ext. Cab	9.25	12	B		T4146-304M
05-10 99-00	F-250/F-350 Super Duty 6 ft. 6 in. Bed Crew Cab w/ BSM	6	12	A		T4069-304M
05-10 99-00	F-250/F-350 Super Duty 6 ft. 6 in. Bed Crew Cab ***9 1/4 Kits only / A Fit = 3/4" gap @ bottom / B Fit 3/4" gap from BSM	9.25	12	A		T4017-304M
01-10	F-250/F-350 Super Duty 6 ft. 6 in. Bed Crew Cab ***T4074/T4083/T4086 Fit 2005 B Fit w/ gap b/w BSM & top of panel	8.25	12	A		T4088-304M
05-08 99-00	F-250/F-350 Super Duty 6 ft. 6 in. Bed Ext. Cab ***9 1/4 Kits only / A Fit = 3/4" gap @ bottom / B Fit 3/4" gap from BSM	9.25	12	A		T4016-304M
01-08	F-250/F-350 Super Duty 6 ft. 6 in. Bed Ext. Cab w/ BSM	5	12	A		T4079-304M
01-08	F-250/F-350 Super Duty 6 ft. 6 in. Bed Ext. Cab	8.25	12	A		T4089-304M
01-09	F-250/F-350 Super Duty 8 ft. Bed Crew Cab (Dually) ***T4079/T4089 Fit 2005 B Fit w/ gap b/w BSM & top of panel	8.25	12	A		T4090-304M
05-10 99-00	F-250/F-350 Super Duty 8 ft. Bed Crew Cab ***9 1/4 Kits only / A Fit = 3/4" gap @ bottom / B Fit = 3/4" gap from BSM	9.25	12	A		T4020-304M
01-10	F-250/F-350 Super Duty 8 ft. Bed Crew Cab ***T4078/T4084/T4086 Fit 2005 B Fit w/ gap b/w BSM & top of panel	8.25	12	A		T4086-304M
01-10	F-250/F-350 Super Duty 8 ft. Bed Reg. Cab ***T4077/T4087/ Fit 2005 B Fit w/ gap b/w BSM & top of panel	8.25	10	A		T4087-304M

*A=Body Side Molding • B=Door Bottom Up • C=Body Side Molding Down to the Bottom of the Door • SP=Special