

# POWER RUNNING BOARDS




## POWER STEP™ AUTOMATIC STEP

Designed and built exclusively in the USA, the genuine AMP Research PowerStep™ seamlessly extends when any door is opened, giving a rock-solid, safe and convenient step up into your truck. When the doors close, it retracts just as smoothly, streamlining the vehicle profile with no loss of ground clearance.


- Integrated LED Light System – Standard
- High-strength, die-cast aluminum-alloy linkage arms, anodized and Teflon®
- Coated to resist corrosion
- Precision, zero-maintenance stainless-steel pivot pins
- Extruded aluminum steps with a textured powder coat finish for maximum grip and durability
- Weatherproof, OEM-quality electric motors and wiring harness with sealed
- AMP-designed electronic controller employs pressure-sensitive, pinch-proof safety technology
- Weather-tight connectors



**5 year / 60,000 mile WARRANTY**

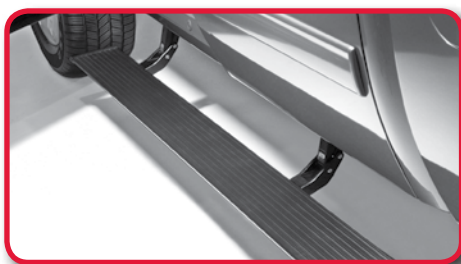

### NEW! OPTIONAL STAINLESS-STEEL TRIM

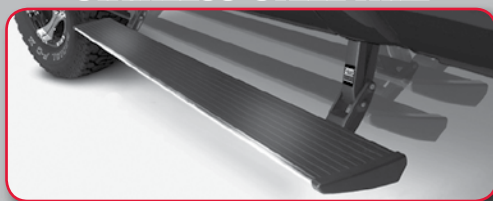

Extension kit Includes 4 arms. Provides 2-inch extra drop for lifted trucks	<b>75130-01A</b>
Stainless-Steel Trim Strips 79" (set of 2)	<b>75149-01A</b>
Stainless-Steel Trim Strips 85" (set of 2)	<b>75150-01A</b>
PowerStep Trim Kit With 79" Extrusion (set of 2)	<b>75151-01A</b>



**\*\*\*NEW STYLE STEP EXTRUSION REQUIRED FOR STAINLESS-STEEL TRIM.** Stainless-steel trim is compatible only with the new-style step extrusion identified by the single-bolt end cap (Not compatible with the AMP Research PowerStep for Jeep Wrangler, Toyota Tacoma and Hummer)

#### CADILLAC

07-12	Escalade EXT/ESV	<b>75125-01A</b>
-------	------------------	------------------

#### CHEVY/GMC

11-12	Silverado/Sierra Ext. Cab (Diesel Engine Only)	<b>75147-01A</b>
11-12	Silverado/Sierra Crew Cab (Diesel Engine Only)	<b>75146-01A</b>
07-12	Silverado/Sierra Ext. Cab (Excludes 11-12 w/ Diesel Engine)	<b>75123-01A</b> (3)
07-12	Silverado/Sierra Crew Cab (Excludes 11-12 w/ Diesel Engine)	<b>75126-01A</b> (3)
99-06	Silverado/Sierra Ext. Cab	<b>75113-01A</b> (1)
99-06	Silverado/Sierra Crew Cab	<b>75113-01A</b> (1)
07-12	Tahoe/Yukon	<b>75124-01A</b>
07-12	Suburban/Yukon XL	<b>75125-01A</b>
07-12	Avalanche	<b>75125-01A</b>

#### DODGE/RAM

09-12	Ram Quad Cab 1500	<b>75143-01A</b>
09-12	Ram Crew Cab 1500	<b>75138-01A</b>
02-08	Ram Quad Cab 1500	<b>75101-01A</b>
06-09	Ram Mega Cab	<b>75118-01A</b>
10-12	Ram Mega Cab	<b>75138-01A</b>
10-12	Ram Crew Cab 2500/3500	<b>75138-01A</b>
03-09	Ram Quad Cab 2500/3500	<b>75101-01A</b>

#### FORD

09-12	F-150 Ext. Cab	<b>75141-01A</b>
09-12	F-150 Crew	<b>75141-01A</b>
04-08	F-150 Ext. Cab	<b>75105-01A</b>
04-08	F-150 Crew	<b>75105-01A</b>
08-12 02-03	F-250/F-350 Super Duty Reg. Cab	<b>75134-01A</b>
08-12 02-03	F-250/F-350 Super Duty Ext. Cab	<b>75134-01A</b>
08-12 02-03	F-250/F-350 Super Duty Crew Cab	<b>75134-01A</b>
04-07 99-01	F-250/F-350 Super Duty Reg. Cab	<b>75104-01A</b> (2)
04-07 99-01	F-250/F-350 Super Duty Ext. Cab	<b>75104-01A</b> (2)
04-07 99-01	F-250/F-350 Super Duty Crew Cab	<b>75104-01A</b> (2)

#### NISSAN

04-12	Titan Crew Cab/Armada/Infiniti QX56	<b>75110-01A</b>
04-12	Titan King Cab	<b>75110-01A</b>

#### TOYOTA

07-12	Tundra Double Cab/Sequoia	<b>75137-01A</b>
07-12	Tundra CrewMax	<b>75137-01A</b>
05-12	Tacoma Double Cab	<b>75142-01A</b>

(1) DIODES REQUIRED. GM trucks and SUVs, model years 1999-2002, require four (4) additional diodes that are not included in the standard parts kit. When ordering please specify the vehicle model year so that the diodes can be included. If needed, additional diodes (Part #10-02727-90) may be ordered at no charge and shipped UPS Ground by calling 1-800-983-2206.

(2) DIODES REQUIRED. 2004-2007 Ford Super Duty trucks without remote keyless plus 2001 and older Super Duty trucks with remote keyless entry require four (4) additional diodes that are not included in the standard parts kit – When ordering please specify the vehicle model year so that the diodes can be included. If needed, additional diodes (Part #401.90) may be ordered at no charge and shipped UPS Ground by calling 1-800-983-2206. Light Kit is not compatible with 2002-2003 Ford Super Duty.

(3) 11-12 GM DIESEL TRUCKS. NOT compatible with 2011 Chevrolet Silverado and GMC Sierra trucks equipped with the Duramax Diesel engine. For 11-12 GM diesel trucks, please order part number 75146-01A or 75147-01A.

## CAB LENGTH BOARDS



- Raised rubber grommets on widened step area
- No-drill, custom fit applications
- Cab length only (Regular, Ext. & Crew Cabs)
- 3 distinct finishing options to choose from:  
*Black/Black*  
*Black/Chrome*  
*Stainless Steel/Black*
- NRT™ powder coated Mounting Brackets (Sold Separately)

### NXT Boards

	Reg Cab.	Ext. Cab	Crew Cab
Black Top w/ Black Trim	<b>16301</b>	<b>16311</b>	<b>16321</b>
Black Top w/ Vac. Chrome Trim	<b>16302</b>	<b>16312</b>	<b>16322</b>
Stainless Top w/ Black Trim	<b>16303</b>	<b>16313</b>	<b>16323</b>



### Mounting Brackets (Sold Separately)

99-12 Silverado/Sierra	<b>16315*</b>
09-12 F-150	<b>16325</b>
99-12 F-250/F-350 Super Duty	<b>16326</b>
09-12 Ram (09 1500 Only)	<b>16335</b>

\*Will not fit 2011+ Diesel



## The Newest Running Board for Crossovers



- Lightweight aluminum powder coated frame
- Full-length protective accent trim
- Slip resistant raised rubber grommets on the step area
- No-drill installation
- NRT™ powder coated Mounting Brackets (Sold Separately)



**16201**  
*Black/Black*



**16202**  
*Black/Chrome*



**16203**  
*Stainless Steel/Black*

### Mounting Brackets (Sold Separately)

08-12 Traverse	<b>16210</b>
06-12 GMC Acadia/Saturn Outlook	<b>16210*</b>
06-12 GMC Acadia Denali	<b>16213</b>
10-12 GMC Terrain/Chevy Equinox	<b>16212</b>
08-12 Buick Enclave	<b>16211</b>
07-12 Ford Edge/Lincoln MKX (Not Eco Boost/Sports Package)	<b>16220</b>
11-12 Ford Explorer	<b>16221</b>
08-12 Nissan Rogue	<b>16251</b>
09-12 Nissan Murano	<b>16252</b>
08-12 Toyota Highlander	<b>16260</b>
10-12 Toyota 4Runner (Not Trail Edition)	<b>16261</b>
06-10 Jeep Commander	<b>16240</b>
09-12 Kia Sorento (Not SX model)	<b>16271</b>

\*Will not fit Denali



# RUNNING BOARDS




## STAINLESS STEEL ELITE

- Streamlined shape with the strength of stainless steel
- Full-length ribbed rubber trim for excellent footing
- Black accent trim on the mud flaps



## BRITE-TREAD

- Dee Zee's classic style
- Non-rusting Brite-Tread aluminum construction provides excellent footing
- BriteGard powder coating prevents oxidation

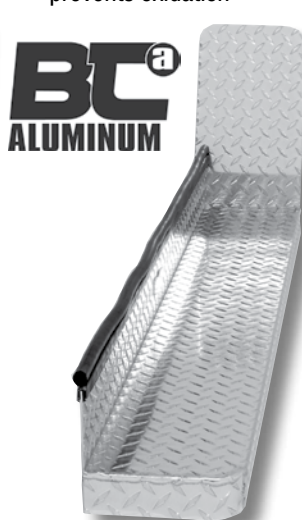

## ALUMINUM & STAINLESS STEEL NERF BOARDS

- Highest Quality Polished 3" Stainless Steel Tube
- Extends from Wheel-to-Wheel
- E-Coated Mounting Brackets
- Limited Lifetime Warranty

\*Call for applications

## FX BLACK

- The style of FX Extruded with a sleek Ultrablack powder coat
- Step pad for secure footing



## FX EXTRUDED

- Lightweight aluminum construction
- Buffed & powder coated for a finish that will last for years
- Step pad for secure footing



### CHEVY/GMC

	SS Elite	Brite-Tread
99-12 Silverado/Sierra Crew Cab	E19953	1053
99-12 Silverado/Sierra Ext. Cab	E19952	1052
99-12 Silverado/Sierra Reg. Cab	E19951	1051
99-12 Silverado/Sierra 6 ft. 6 in. Bed Box Board*	E18958	1358
99-12 Silverado/Sierra 8 ft. Bed Box Board* (Not HD Models)	E18959	1359

### DODGE/RAM

10-12 Ram Mega Cab	E39929	3029
09-12 Ram Crew Cab (09 1500 Only)	E39930	3030
09-12 Ram Quad Cab (09 1500 Only)	E39928	3028
09-12 Ram Reg. Cab (09 1500 Only)	-	3027
09-12 Ram 6 ft. 4 in. Bed Box Board (09 1500 Only)	-	3374
09-12 Ram 8 ft. Bed Box Board (09 1500 Only)	-	3375
03-09 Ram Quad Cab (09 2500 Only)	E39923	3021
03-09 Ram Reg Cab (09 2500 Only)	E39922	3020
03-09 Ram 6 ft. 4 in. Bed Box Board (09 2500 Only)	E38946	3307
03-09 Ram 8 ft. Bed Box Board (09 2500 Only)*	E38947	3308
03-09 Ram 2500/3500 8 ft. Bed Dually	E38948	3309

### FORD

09-12 F-150 Ext. Cab	E29933	2041
09-12 F-150 Reg. Cab	-	2032
04-08 F-150 Ext. Cab	-	2041
04-08 F-150 Reg. Cab	-	2040
99-12 F-250/F-350 Super Duty Crew Cab	E29943	2038
99-12 F-250/F-350 Super Duty Ext. Cab	E29949	2037
99-12 F-250/F-350 Super Duty Reg. Cab	E29948	2036
08-11 F-250/F-350 Super Duty 6 ft. Bed Box Board*	E28976	2376
08-11 F-250/F-350 Super Duty 8 ft. Bed Box Board*	E28977	2377
08-11 F-250/F-350 Super Duty 8 ft. Bed Box Board Dually	-	2378
99-07 F-250/F-350 Super Duty 6 ft. Bed Box Board*	-	2309
99-07 F-250/F-350 Super Duty 8 ft. Bed Box Board*	E28943	2310
99-07 F-250/F-350 Super Duty 8 ft. Bed Box Board Dually	E28940	2311

\*Not Dually

### CHEVY/GMC

	FX Black	FX Extruded
99-12 Silverado/Sierra Crew Cab	FX11353	FX11953
99-12 Silverado/Sierra Ext. Cab	FX11352	FX11952
99-12 Silverado/Sierra Reg. Cab	FX11351	FX11951
99-12 Silverado/Sierra 6 ft. 6 in. Bed Box Board*	FX12358	FX12958
99-12 Silverado/Sierra 8 ft. Bed Box Board (Not HD Models)*	FX12359	FX12959

### DODGE/RAM

10-12 Ram Mega Cab	FX31329	FX31929
09-12 Ram Crew Cab (09 1500 Only)	FX31330	FX31930
09-12 Ram Quad Cab (09 1500 Only)	FX31328	FX31928
09-12 Ram Reg. Cab (09 1500 Only)	FX31327	FX31927
09-12 Ram 6 ft. 4 in. Bed Box Board (09 1500 Only)	FX32374	FX32974
09-12 Ram 8 ft. Bed Box Board (09 1500 Only)	FX32375	FX32975
06-09 Ram Mega Cab (09 2500 Only)	-	FX31926
03-09 Ram Quad Cab (09 2500 Only)	FX31323	FX31923
03-09 Ram Reg Cab (09 2500 Only)	FX31322	FX31922
03-09 Ram 6 ft. 4 in. Bed Box Board (09 2500 Only)	-	FX32946
03-09 Ram 8 ft. Bed Box Board (09 2500 Only)*	-	FX32947

### FORD

09-12 F-150 Crew Cab	FX21334	FX21934
09-12 F-150 Ext. Cab	FX21362	FX21962
09-12 F-150 Reg. Cab	FX21332	FX21932
04-08 F-150 Crew Cab	FX21363	FX21963
04-08 F-150 Ext. Cab	FX21362	FX21962
04-08 F-150 Reg. Cab	FX21361	FX21961
99-12 F-250/F-350 Super Duty Crew Cab	FX21352	FX21952
99-12 F-250/F-350 Super Duty Ext. Cab	FX21351	FX21951
99-12 F-250/F-350 Super Duty Reg. Cab	FX21350	FX21950
08-12 F-250/F-350 Super Duty 8 ft. Bed Box Board*	FX22377	FX22977
99-07 F-250/F-350 Super Duty 6 ft. Bed Box Board*	-	FX22967

### TOYOTA

07-12 Tundra Ext. Cab	FX61321	-
07-12 Tundra Crew Cab	FX61322	-

\*Not Dually