


TIMBREN SES

Suspension Enhancement Systems
EASY BOLT-ON, NO DRILLING

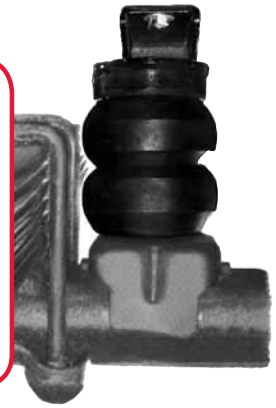

Application	2WD		4WD	
	Front	Rear	Front	Rear
CHEVY/GMC				
07-12 Silverado/Sierra 1500, Denali (Excl. XFE)	GMFK15CA	GMRCK15S	GMFK15CA	GMRCK15S
11-12 Silverado/Sierra 2500	GMFK25D	GMRCK25D	GMFK25D	GMRCK25D
99-10 Silverado/Sierra 1500 HD/2500 HD	GMFK25S	GMRCK25S	GMFK25S	GMRCK25S
11-12 Silverado/Sierra 3500	GMFK25D	GMRCK25D	GMFK25D	GMRCK25D
06-10 Silverado/Sierra 3500, Cab & Chassis, Not Dually	GMFK25S	GMRCK35S	GMFK25S	GMRCK35S
DODGE/RAM				
09-12 Ram 1500 Quad Cab	DF15004B	DR1500DQ	DF15004B	DR1500DQ
09-12 Ram 1500 Ex. Quad Cab	DF15004B	DR1500DS	DF15004B	DR1500DS
03-12 Ram 2500	DDF974A	DR2500CA	DF25004B	DR2500CA
07-12 Ram 3500	DF25004B	DR3500CA	DF25004B	DR3500CA
FORD				
09-12 F-150	-	FR1502D	FF150F	FR1504D
11-12 F-250 Super Duty	FF350SD2	FR250SDG	FF350SDC	FR250SDG
05-10 F-250 Super Duty	FF350SD2	FR250SDF	FF350SDC	FR250SDF
05-12 F-350 Super Duty	FF350SD2	FR350SDF	FF350SDC	FR350SDF



AIR HELPER SPRINGS



- Level vehicle front-to-rear & side-to-side
- Adjustability 5-100 p.s.i.
- Stabilize the vehicle while loaded
- Maximize vehicles load carrying capacity

Minimum Tire to Frame Clearance Requirements:
 * = 7.50" + = 8.00"
 ** = 3.00" ++ = 6.00"
 *** = 9.50" +++ = 6.50"
 # = Use spacer kit 2366 w/ HD package
 & = w/ in bed hitch, no drill
 • = w/out in bed hitch, no drill
 % = vehicle lifted 4" w/ springs

CHEVY/GMC		Front Kit	No Drill	Rear Kit	No Drill
07-12	Silverado/Sierra 1500 2WD & 4WD	-		2430	X
99-06	Silverado/Sierra 1500 2WD & 4WD No in-bed hitch	-		2320++	
05-06	Silverado/Sierra 1500 HD 2WD & 4WD	1003	X	2190	
11-12	Silverado/Sierra 2500/3500 HD 2WD & 4WD	-		2528	
01-10	Silverado/Sierra 2500/2300 HD 2WD & 4WD	1003	X	2250	X
DODGE/RAM					
09-12	Ram 1500 2WD & 4WD	-		4185	X
03-12	Ram 2500 4WD	1004	X	2299	
03-12	Ram 3500 4WD	1004	X	2299	X
FORD					
09-12	F-150 2WD & 4WD	-		2525+	X
04-08	F-150 2WD & 4WD (Not FX2 or Harley Davidson)	-		2350#	X
11-12	F-250 Super Duty Gas 4WD	4160	X	2452*	X
11-12	F-250 Super Duty Diesel 4WD	4160	X	2071*	
08-10	F-250 Super Duty 4WD	4160	X	2071* 2450& 2452• 2264*% 2071* 2400& 2452• 2264*% 2071* 2330& 2484• 2264*%	X X X X X X
05-07	F-250 Super Duty 4WD	4160	X		
99-04	F-250 Super Duty 4WD	2223			

The Level Command Heavy Duty Air System



WR1-760-2097

The Level Command Kit provides fingertip control of your air helper spring using a heavy duty compressor, providing equal inflation of both air springs.

Firestone

Ride-Rite™ air helper springs mount between the frame and the suspension of light-trucks, vans, and motorhomes. The heavy-duty convoluted air springs will handle all leveling needs with load carrying capacities between 3,200-5,000 lbs per set.

AIR SPRING SYSTEMS



Handle your heaviest loads with full-time load support, increased safety and ride comfort

LoadLIFTER 5000



- Up to 5,000 pounds of leveling capacity**
- Air Lift exclusive: Upper and lower roll plates are included in each LoadLifter 5000™ kit. They protect the air springs from sharp edges, such as brackets or the vehicle's frame, and increase load capacity up to 10%
- Fits most ¾ ton and 1 ton vehicles
- Kits available for vehicles with in-bed hitches

Delivers more stability, safety and ride comfort

RideCONTROL



- Up to 2,000 pounds of leveling capacity**
- Fits most ½ ton and mini pickups, full size and minivans and SUVs with leaf springs
- Front and rear applications available

Adjustable load support for coil sprung vehicles - front or rear

Air Lift1000



- Up to 1,000 pounds of leveling capacity**
- Replaces OEM front air springs on P30/32 motorhomes
- Fits open coil springs on the front or rear

LoadLIFTER 5000

CHEVY/GMC

11-12	Silverado/Sierra 2500/3500 HD 2WD & 4WD	57338
01-10	Silverado/Sierra 2500/3500 HD 2WD & 4WD	57275
99-04	Silverado/Sierra 2500 LD 2WD & 4WD	57250

DODGE/RAM

03-10	Ram 2500/3500 Single & Dual Wheel 2WD	57297
03-12	Ram 2500/3500 Single & Dual Wheel 4WD	57295
94-02	Ram 3500 2WD & 4WD	57215

FORD

11-12	F-250/F-350 Super Duty 4WD	57396
11-12	F-250/F-350 Super Duty 2WD	57395
05-10	F-250/F-350 Super Duty 2WD & 4WD	57212
05-10	F-250/F-350 Super Duty 4WD Under Frame*	57398
05-10	F-250/F-350 Super Duty 2WD Under Frame*	57397
99-07	F-250/F-350 Super Duty 2WD & 4WD	57291
71-04	F-250/F-350 Super Duty 2WD & 4WD (8,800 GVRW)	57215
71-04	F-250/F-350 Super Duty 2WD & 4WD	57298

*For in-bed hitches

RideCONTROL

CHEVY/GMC

07-12	Silverado/Sierra 1500 2WD & 4WD	59565
99-07	Silverado/Sierra 1500 2WD & 4WD	59501

DODGE/RAM

02-08	Ram 1500 2WD & 4WD	59551
-------	--------------------	-------

FORD

04-09	F-150 2WD & 4WD	59544
-------	-----------------	-------

Air Lift1000

DODGE/RAM

09-12	Ram 1500 2WD & 4WD	60818
-------	--------------------	-------

LIFETIME WARRANTY



60 DAY NO QUESTIONS ASKED, MONEY-BACK GUARANTEE

** Never exceed manufacturer's recommended Gross Vehicle Weight Rating

ONBOARD AIR SYSTEMS



TWO YEAR COMPRESSOR SYSTEM WARRANTY

60 DAY NO QUESTIONS ASKED, MONEY-BACK GUARANTEE

- Add an Air Lift on-board air compressor system to inflate and deflate your air springs with the touch of button – from inside or outside of the vehicle
- Each system comes complete with everything needed to install including compressor, controller and all parts
- Single path systems: set both air springs to the same pressure; Dual path systems: set each air spring to independent pressures

WirelessAIR™



- Premium on-board control of your air springs
- Easy to install, no lines or wires to the cab
- Includes heavy duty compressor
- 72000

WirelessONE™



- Economically priced, wireless control of your air springs
- Easy to install, no lines or wires to the cab
- Includes standard duty compressor
- 25870

LoadController™ / Single



- Compact sized gauge for easy mounting and one-touch control
- Set both air springs to the same pressure
- Choose standard or heavy duty compressor
- LC single, Standard duty 25850, Heavy duty 25854

LoadController™ / Dual



- Compact sized gauge for easy mounting and one-touch control
- Set each air spring to an independent pressure
- LC Dual, Standard duty 25852, Heavy duty 25856

LoadController™ I and II



- Panel mounted systems. Economical, popular, basic system
- LoadController I: Standard duty 25655, Heavy duty 25651
- LoadController II: Standard duty 25592, Heavy duty 25812

SmartAir™



- Automatic leveling system. No contact arm or lines to the cab
- Single Path: 25415
- Dual path: 25430

QuickShot™



- Pressure driven reservoir system moves air faster so air springs react faster
- Single Path: 25690
- Dual Path: 25572

Not all applications listed. Please call for additional applications.



FRONT LEVELING KITS

ReadyLift Suspension Inc. is the leading name in truck and SUV Leveling Kit Products. ReadyLift has a full line of leveling components ranging from the industry leading forged leveling torsion key complete with shock extension brackets, to strong steel strut spacers and machine billet aluminum strut spacers, including adjustable version for late model GM SUVs and SUTs.



READYLIFT

SUSPENSION INC.

FRONT LEVELING KITS

CHEVY/GMC	LUGS	P/N	Tires	Method	Lift
07-12 Silverado/Sierra 1500	-	66-3080	32.5"	Strut Extension	1.5"
07-12 Silverado/Sierra 1500	-	66-3085	33"	Strut Extension	2.25"
11-12 Silverado/Sierra 2500 HD	8 Lug	66-3011	33"	Torsion Key	2.5"
00-10 Silverado/Sierra 2500 HD	8 Lug	66-3050	33"	Torsion Key	2.5"
88-06 Silverado/Sierra 1500	-	66-3000**	33"	Torsion Key	2.5"
DODGE/RAM					
09-12 Ram 1500	-	66-1030**	35"	Strut Extension	2.0"
06-08 Ram 1500	-	66-1020**	35"	Strut Extension	2.5"
02-05 Ram 1500	-	66-1000**	35"	Torsion Key	2.0"
94-01 Ram 1500	-	66-1090**	35"	Coil Spacer	2.0"
94-12 Ram 2500/3500/Mega Cab	8 Lug	66-1090**	35"	Coil Spacer	2.0"
FORD					
04-12 F-150	-	66-2059	33"	Strut Extension	2.0"
97-04 F-150 Old Body/Heritage	-	66-2000**	33"	Torsion Key	2.5"
11-12 F-250 Super Duty	-	66-2111**	35"	Lower Coil Spacer	1.5"
05-10 F-250/F-350 Super Duty	-	66-2095**	37"	Strut Extension	2.5"
97-00 F-250 Light Duty Only	-	66-2000**	33"	Torsion Key	2.5"
04-07 F-350 Super Duty	-	66-2085**	35"	Leaf Spring	2.0"
TOYOTA					
07-12 Tundra	-	66-5075**	33"	Strut Extension	2.5"

** 4WD only.



Improve Clearance for Aftermarket Tires & Wheels



REAR BLOCK KITS

ReadyLift's OEM style rear block kits are now available for model specific applications. The Rear Block Kits include (2) cast iron blocks, (4) E-coated U-bolts, (8) Nuts and Washers and will safely lift the rear of your truck an additional 1"-3". These kits will put a slight rake back into your truck for hauling or towing and are designed to work with your ReadyLift Suspension Leveling Kit.

REAR BLOCK KITS

CHEVY/GMC	Block Size	P/N
99-12 Silverado/Sierra 1500	2"	66-3002
99-12 Silverado/Sierra 1500	3"	66-3003
99-10 Silverado/Sierra 2500 HD	1"	66-3051
99-10 Silverado/Sierra 2500 HD	2"	66-3052
DODGE/RAM		
02-08 Ram 1500	1"	66-1101
03-12 Ram 2500	2"	66-1202
FORD		
04-10 F-150	3"	66-2053**
11-12 F-250 Super Duty	4"	66-2014**
11-12 F-250 Super Duty	5"	66-2015**
99-10 F-250 Super Duty	4"	66-2094**
99-10 F-250 Super Duty	5"	66-2195**

** 4WD only.



SST LIFT KITS

CHEVY/GMC	Lift	Tire Size	P/N
07-12 Silverado/Sierra 1500	4.0" F / 1.75" R	33"	69-3485**
11-12 Silverado/Sierra 2500/3500 HD	4.0" F / 1.0" R	34"	69-3411
11-12 Silverado/Sierra 2500/3500 HD Tow Package	4.0" F / 2.0" R	34"	69-3412
DODGE/RAM			
09-12 Ram 1500	2.5" F / 1.5" R	35"	69-1030**
FORD			
11-12 F-250 Super Duty	2.5" F / 2.0" R	35"	69-2011**
08-10 F-250 Super Duty	3.5" F / 1.0-3.0" R	37"	69-2538**
TOYOTA			
07-12 Tundra (Non TRD)	3.0" F / 1.0" R	33"	69-5075
07-12 Tundra TRD	3.0" F / 2.0" R	33"	69-5076

* Not all kits listed. ** 4WD only.

SST LIFT KITS

ReadyLift's new 69 Series Lift Kits are called Smart Suspension Technology (SST) Lift Kits and are specifically designed to provide a lifted, but level stance along with clearance for maximum wheel/tire sizes, all while maintaining your factory ride. In addition, SST Lift Kits install in one-third the time of a more expensive conventional lift kit and none of ReadyLift's SST Lift Kits require permanent modification to your truck or SUV, making it easy and cost effective to return the vehicle to stock.

